




Installation Guide

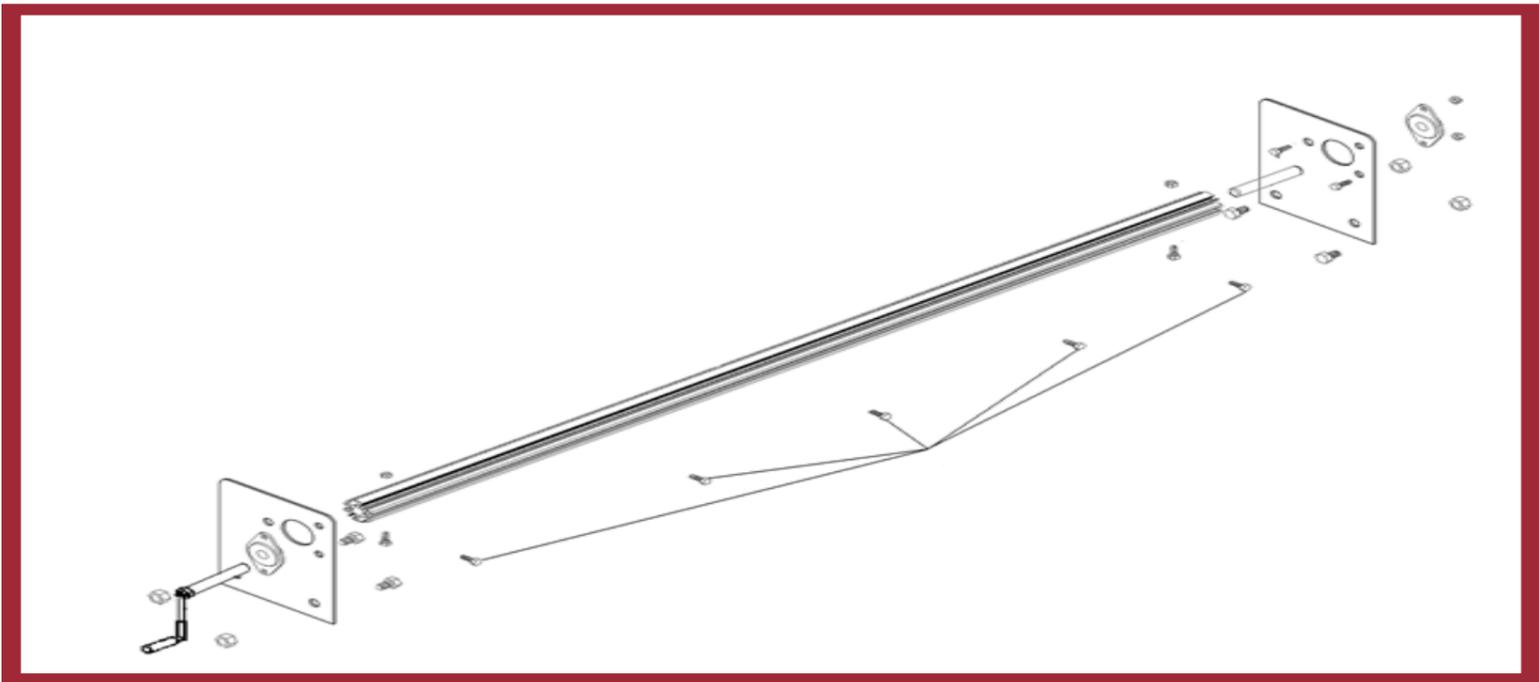

Installation Guide
Cab Level Crank Style Tarp System

Exploded Views



Installation Instructions

Mounting

System Parts List



Cab Level Crank Style Tarp System Installation Instructions

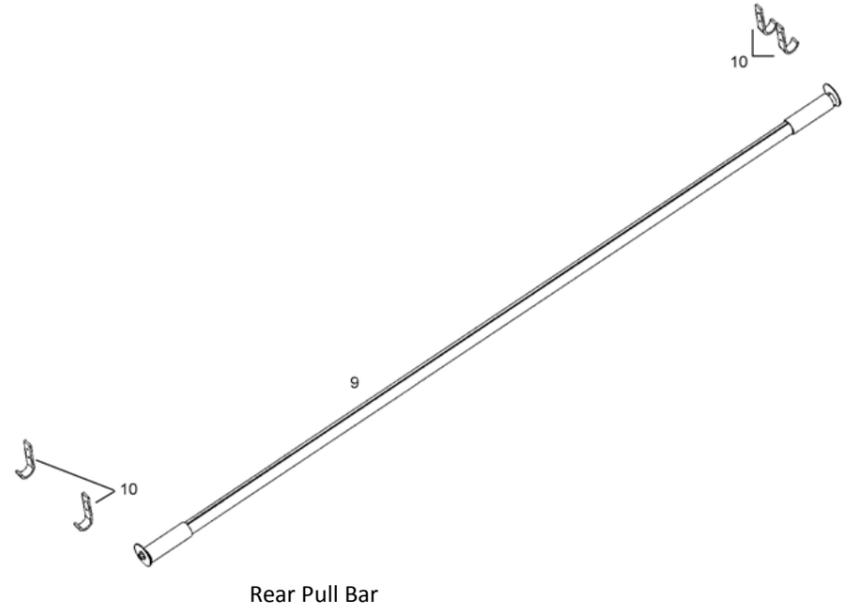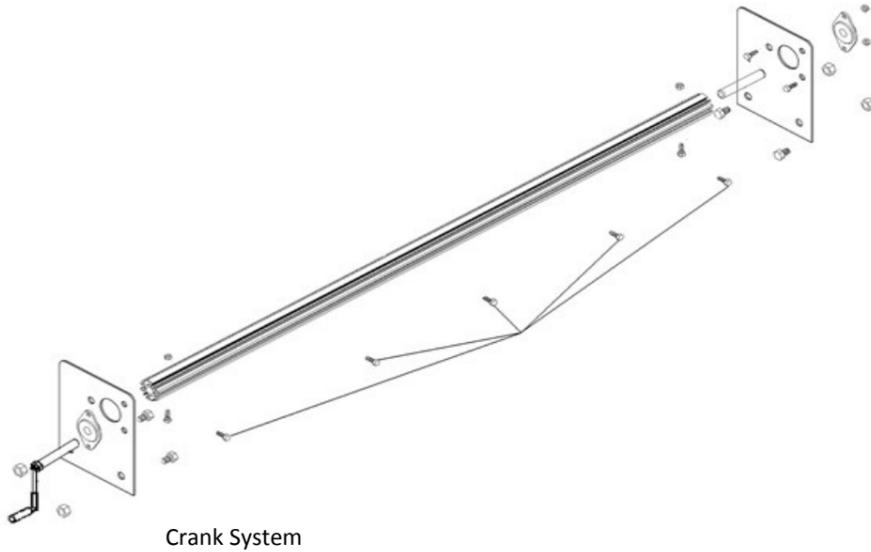

- Can be used with tarps up to 40' long.
- Spring loaded break away crank handle
- 1 1/2" diameter Aluminum extruded Tarp Axle
- Steel powder coated mounting brackets and sealed bearings

MOUNTING THE TARP SPOOL MOUNTING BRACKETS

- 1) Mount the two supplied TARP SPOOL MOUNTING BRACKETS on the exterior, and as far forward as possible, of the dump box. Drill the two mounting bracket holes 1-3/4" down from the top edge of the box.
- 2) Use the supplied 1/2" x 1" bolts & 1/2" nuts for attaching the Tarp Spool Mounting Bracket.
- 3) Install the AXLE BEARING WITH FLANGE to the outside of the TARP SPOOL MOUNTING BRACKET on both the driver's side and the passenger side of the truck. Use the supplied 5/16" x 7/8" bolts & 5/16" nuts for mounting.

Installing the Tarp Axle

- 1) Measure the distance between the two TARP SPOOL MOUNTING BRACKETS. Verify that the TARP AXLE is 1-inch shorter than this length. If the Tarp Axle is too long, cut it to the correct length then redrill a 5/16" hole 1/2" from the end.
- 2) Slide the two PLASTIC TARP AXLE CAPS into both ends of the TARP AXLE.
- 3) Slide the TARP AXLE into the ROTATABLE HANDLE SHAFT and secure with a 5/16" x 2-1/4" bolt & 5/16" nut.
- 4) Slide the SPOOL SHAFT into the other end of the Tarp Axle and secure with a 5/16" x 2-1/4" bolt & 5/16" nut.

Rear Pull Bar Installation

- 1) Slide splined side of tarp into extrusion on the pull bar
- 2) Slide PVC tube sections over each open side of pull bar.
- 3) Attach fender washer and bolt into extruded portion of pull bar.

System Includes

QTY.	Part Number #	Description
1	13967	Tarp Axle, Hollow 103", 1-1/2"
2	13943	1 1/2" Plastic Tarp Axle Cap
2	11366	Steel Tarp Spool Mounting Brackets
2	11139	Axle bearing with flange
1	11201	Spool Shaft 5" length
1	11265	Rotatable Handle on Shaft

Hardware Kit Includes

QTY.	Part Number #	Description
4	11270	1/2"-13 x 1" Grade 5 Bolt
4	11271	1/2" - 13 Grade 8 Nylock Nut
4	11207	5/16" - 18 x 2-1/4" Bolt
1	11202	5/16" - 18 x 2-1/4" Bolt
6	1129	5/16" Grade 8 Nylock Nut
5	14026	1/4" x 1" Zinc Plated Fender Washer
5	11362	1/4" Nylock Nut
5	13922	1/4"-20 x 3/4" Zinc Plated Carriage Bolt

Tools Required

3/8" Drive Ratchet	1/4" Socket & Wrench
Electric Drill	5/16" Socket & Wrench
Radial Arm Saw	1/2" Socket & Wrench
Rubber Mallet	
Tape Measure	



Cab Level Crank Style Tarp System Installation Instructions




Attaching the Tarpaulin

Bring the free end of the TARP to the front of the truck. to attach the Tarp to the **TARP AXLE (#7)**:

- 1) Tarps with Grommets on the front edge can also be mounted by sliding the 1/4-20 x 3/4" Zinc Plated Carriage Bolt in the correct slot and then screw together using 1/4" x 1" Zinc Plated Fender Washer 1/4" Nylock Nut (#15)

(Optional Heavy duty Tarp Axle see Top Left Picture;
Hollow 103" Tarp Axle see Bottom Left Picture)

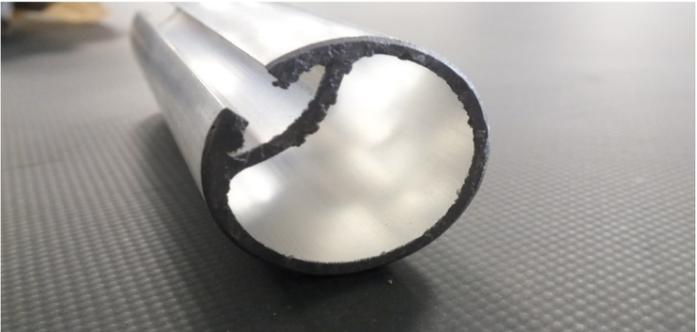

If you need Further Assistance....

Please visit www.USTarp.com
Call Toll Free 800-249-0297

Our Friendly Customer Service Representatives will gladly assist you with any problems or issues you may encounter.

Contact & Connect with us

Toll Free: 800-249-0297

www.USTarp.com

sales@ustarp.com

